



I6328A 蓝牙模块 FCC/SRCC 认证测试操作说明

1. 硬件连接说明：




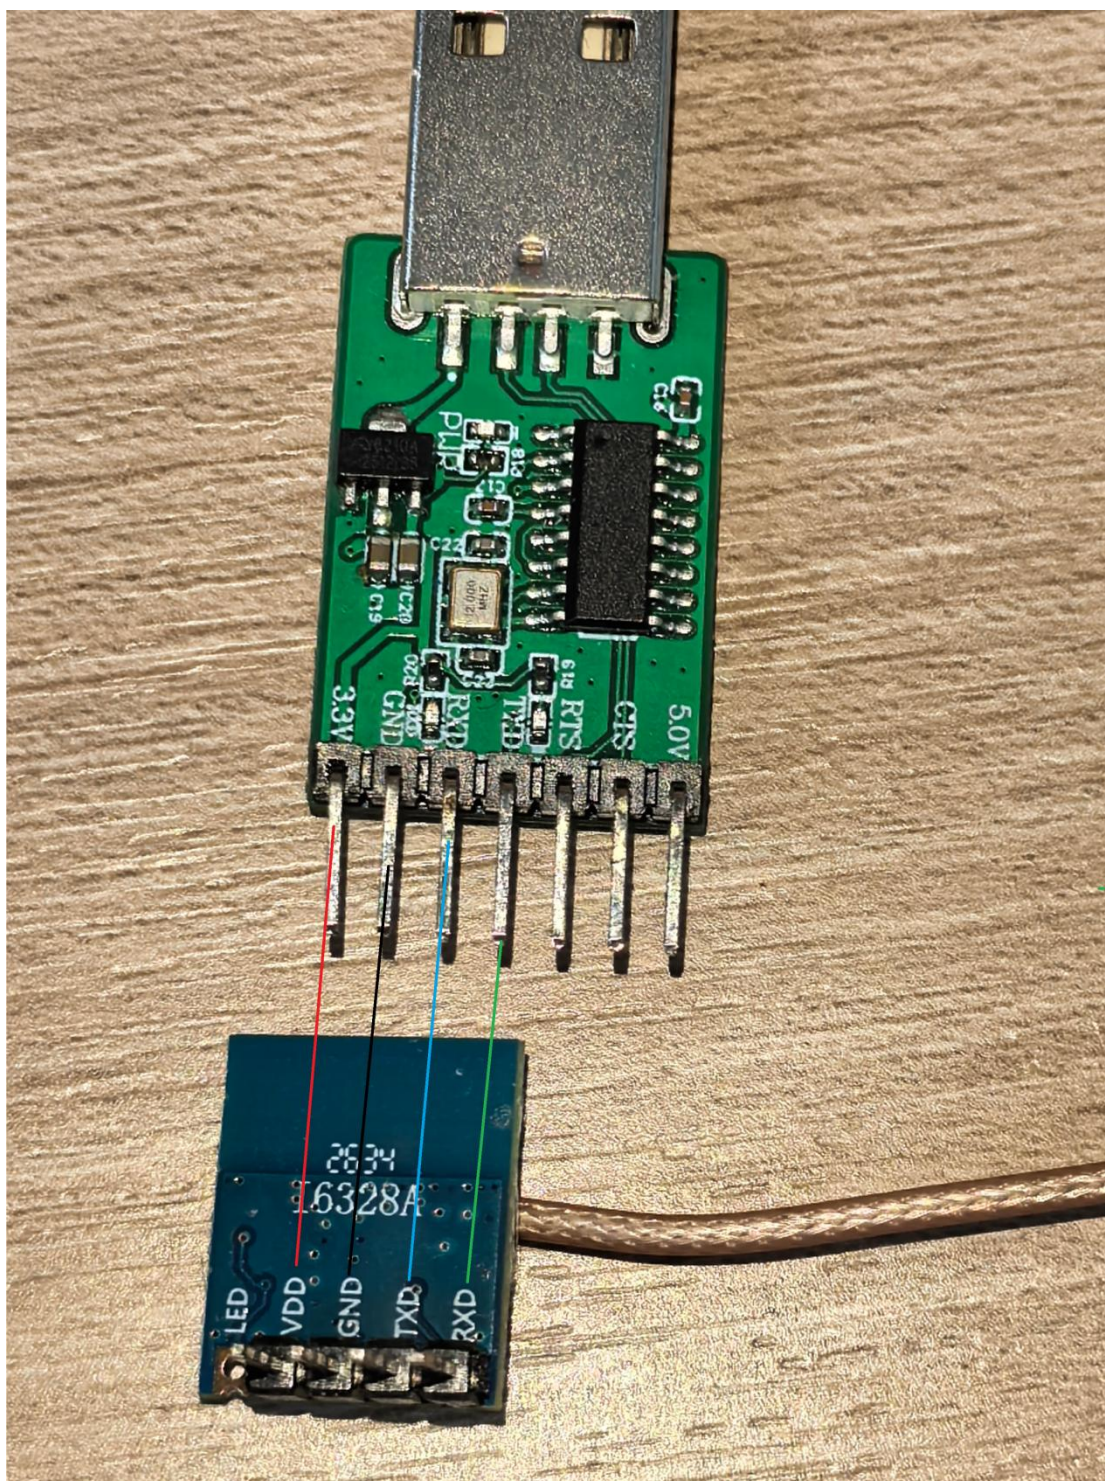

2. 经典蓝牙定频

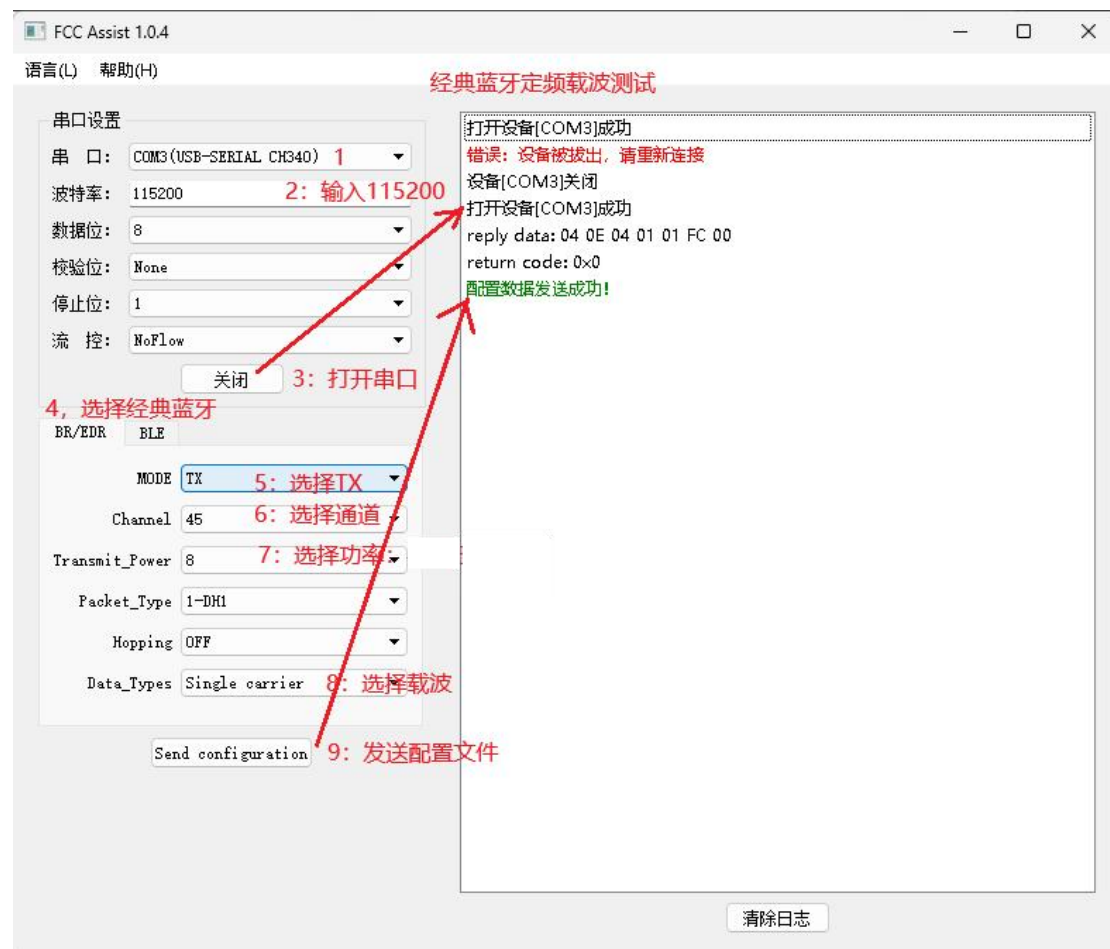

3. BLE 定频修改发送功率（需要发送载波命令后才有效）

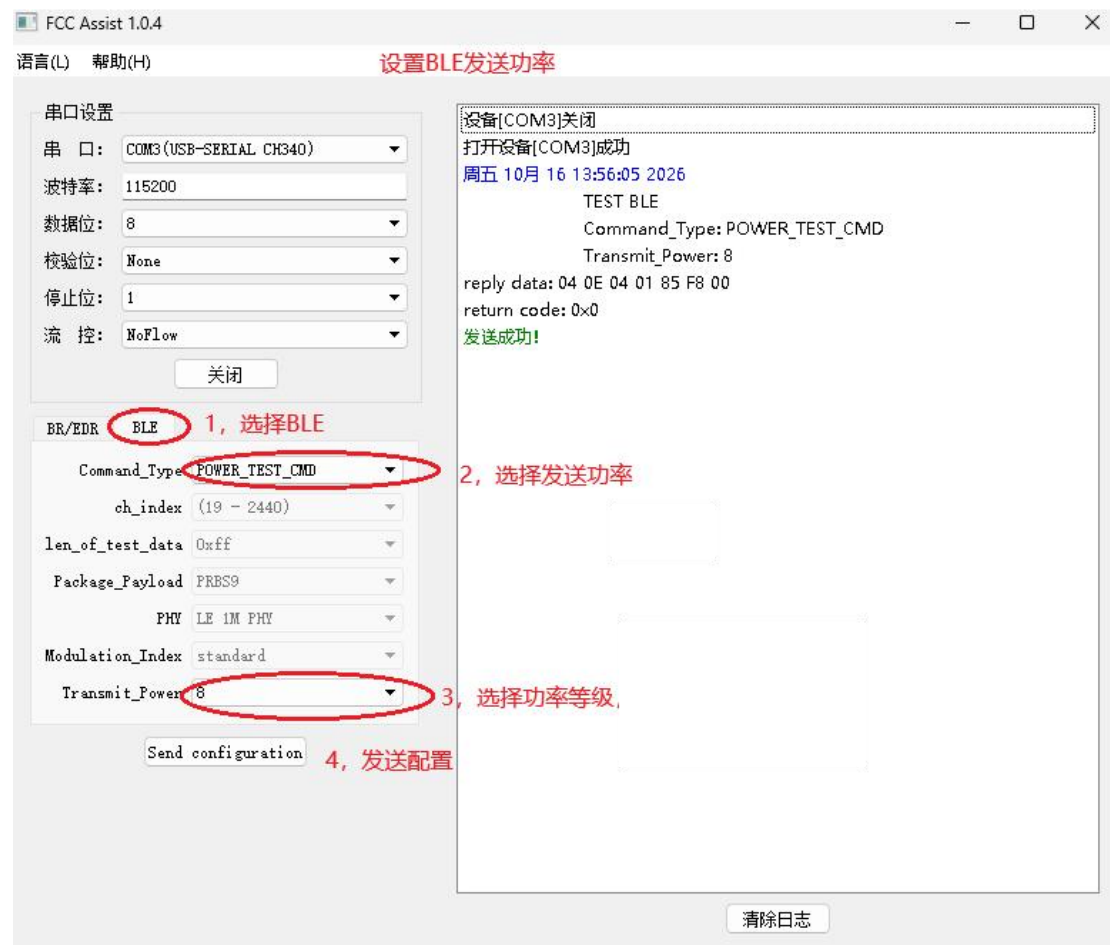

4. BLE 定频设置载波命令（需要发送载波命令后才有效）

注意命令是 EN_TX_TEST_CM 不是 TX_TEST_CMD!!!!!!!!!!!!!!!!!!!!!!

